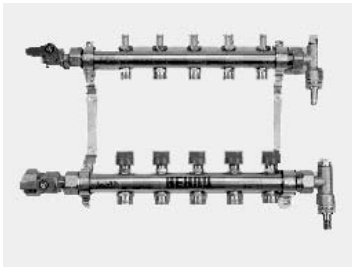


Pro-Balanced Manifold with Gauges


Each manifold comes complete with:

- 1" NPT supply and return isolation valves
- Air vent / fill ports
- Visual flow gauge
- Circuit balancing / isolation valves on return side
- Mounting Brackets

Part No.	Stations	Manifold Length
RH240021N	2	11.8"
RH240031N	3	14"
RH240041N	4	16.2"
RH240051N	5	19.3"
RH240061N	6	20"
RH240071N	7	23.7"
RH240081N	8	24.8"
RH240091N	9	27"
RH240101N	10	29.2"

HLV Manifold


Each manifold comes complete with:

- 1" NPT supply and return isolation valves
- Mounting Brackets
- Vent elbows
- Can fit within 2" x 4" stud wall
- Only 3-1/4" deep

Part No.	Stations	Manifold Length
RH250327	2	11.4"
RH250337	3	13.6"
RH250347	4	15.8"
RH250357	5	17.9"
RH250367	6	20.1"
RH250377	7	22.3"

Manifold Cabinet


REHAU manifold cabinets are made from galvanized steel with welded seams for strength and durability.

Integral brackets allow for easy mounting of any Pro-Balanced or HLV Brass Manifold. Copper manifolds can be mounted in cabinet using REHAU steel manifold brackets.

Cabinets come with adjustable legs to mount the cabinet on the floor; legs can be removed to flush-mount the cabinet inside the cabinet wall cavity. Cabinets include a steel door and have pipe knockouts on both sides for pipe connections to the manifold.

Part No.	Stations	Width	Height	Depth
RH250437	1 to 3	15.7"	27.6"	4.3" - 6.3"
RH250447	2 to 6	21.7"	27.6"	4.3" - 6.3"
RH250457	3 to 9	29.5"	27.6"	4.3" - 6.3"
RH250467	4 to 12	37.4"	27.6"	4.3" - 6.3"
RH250477	5 to 12	45.3"	27.6"	4.3" - 6.3"

Steel Manifold Bracket

These sturdy brackets are for use with copper manifolds used in supply / return configuration. Flexible liners inside holders reduce vibration / noise transfer and permit limited movement.

Part No.	Size	Description
RH244317	1-1/2"	Manifold Bracket
RH244417	2"	Manifold Bracket

Manifold Union


For use with Pro-Balance or HLV manifolds to connect 2 or more manifolds together in series.

Part No.	Size	Description
RH260407	1"	Manifold Union

Brass Circuit Outlet Cap


Brass circuit outlet cap is used to cap off extra outlets on any Pro-Balance or HLV manifold.

Includes: gasket

Part No.	Description
RH250209C	R-20 Brass Cap with Gasket

BSP Angle Piece


For Pro-Balance or HLV manifolds. Can be used to install 1" manifold station isolation valves at a right angle to manifold. Includes: union nut and gasket

Part No.	Size	Description
RH250214	1"	90 deg Angle Piece

Mini-Thermometer


Mini-thermometers can be set into the housings on 1" NPT Valves with thermometer housings to give accurate readings of temperatures on both supply and return sides of any Pro-Balance or HLV manifold. Thermometer reads from 40 F - 200 F

Part No.	Size	Temperature Range
RH250218	1"	40° F - 200° F