

(SIDE A)

INSTALLATION INSTRUCTIONS

DO NOT USE A PIPE WRENCH: when making installation, use proper type & size wrench pads. Be sure that this valve is assembled to a clean fitting. Do not use excessive pipe dope which could get up onto the valve seat.



CAUTION! This pop safety valve is designed for use on low pressure steam heating boilers only with steam as a media. Do not plug drain hole in valve bonnet. No shut off valve shall be placed between the safety valve and the boiler. Conbraco Industries nor its agents assumes any liability for valves improperly installed.


The Absence of this tag on returned goods voids warranty.

See A.S.M.E. Heating Boiler Code, Section IV for Installation requirements.

(SIDE B)

MAINTENANCE INSTRUCTIONS

This valve is designed to give satisfactory service for a long period of time. We recommend that a "try lever test" be performed every two months.

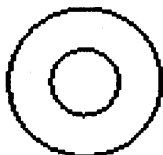

The valve shall be tested at maximum operating steam pressure. Hold the trip lever full open for at least 5 seconds in order to flush off the valve seat any sediment that may lodge on the seat. Then permit the valve to snap shut. Care should be taken during operation of the lift lever as this will allow hot steam to discharge upward.

DO NOT DISCHARGE BOILER WATER UP PAST VALVE SEAT WHEN FILLING BOILER.

CONBRACO INDUSTRIES, INC., MATTHEWS, N.C.

Form # I-2847-00