

## Honeywell Cell Handle Installation

First; Swing the  
handle in to the slot.

Be sure to mount the handle on the end of  
the cell that is facing out. The end of the  
cell that faces out depends on YOUR air  
flow direction. Once snapped in ... the  
handle can not be moved to the other side.



Second; Press the handle in to the cell, snaps in the square hole.



Third; Fold over the flap and press the locking tab in to the center hole.



*Photos compliments of our customer  
The Bowyer Studio, Inc.*