


**CONFIGURATION**

**Jumper Locations**

- ❶ Clip for remote sense
- ❷ 3-pin connector
- ❸ Clip for electric heat

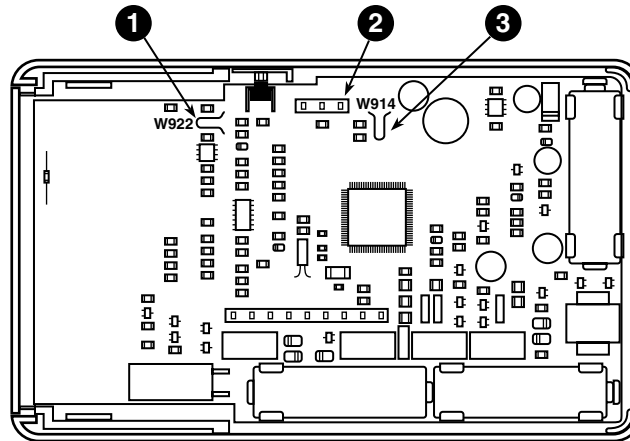

**RESETTING THERMOSTAT**

The thermostat can be reset back to factory default programs and configuration options. Removing power from the thermostat **will not** reset it to the default settings. Before resetting the thermostat, you may want to make note of the previously selected configuration options and programming.

To reset the thermostat, press and release **PROGRAM** (RUN), then press the **FAN**, **TIME** (BACK) and **DOWN** buttons at the same time. This will reset the thermostat to factory default programs and configuration. The display will momentarily go blank, then all segments on the display will momentarily be shown. The thermostat will then go into the **HOLD** mode and will maintain factory preset temperatures.

**Customizing Your Comfort-Set 90 Thermostat**

The following table allows you to customize the options on your Comfort-Set 90 thermostat. Begin by pressing simultaneously the two buttons in step 1.

-391 Step	-371 Step	Press Button(s)	Displayed (Factory Default)	Press <b>UP</b> or <b>DOWN</b> to select:	COMMENTS
1	1	<b>TIME</b> (FWD) and <b>TIME</b> (BACK)	PROG MODE (5 2)	5 1 1	Selects program mode (5+2 Day or 5+1+1 Day) <b>1F90 ONLY</b> .
1	2	<b>TIME</b> (FWD)	EMR (ON)	OFF	Selects EMR option ON or OFF
2	3	<b>TIME</b> (FWD)	SET CYCL HEAT (05)	02 - 40	Adjusts heat anticipation value (2 through 40)
3	4	<b>TIME</b> (FWD)	SET CYCL COOL (14) (12 for -391)	09 - 40	Adjusts cool anticipation value (9 through 40)
4	5	<b>TIME</b> (FWD)	COOL FAN DELA OFF (01)	01 - 127	Adjusts cool fan-off delay (1 through 127 sec.)
5	6	<b>TIME</b> (FWD)	COOL FAN DELA ON (04)	01 - 05	Adjusts cool fan-on delay (1 through 5 sec.)
6	7	<b>TIME</b> (FWD)	COMP LOCK (ON) (OFF) for -391	OFF	Selects compressor lockout ON or OFF (see NOTE)
7	8	<b>TIME</b> (FWD)	SYSTEM (HEAT-OFF-COOL-AUTO)	HEAT-OFF, COOL-OFF, HEAT-OFF-COOL	Selects system switch choices for heat only, cool only, heat/cool or automatic changeover
8	9	<b>TIME</b> (FWD)	0° F (0)	5 LO to 5 HI	Adjusts temperature display higher or lower
9	10	<b>TIME</b> (FWD)	°(F)	°C	Adjusts temperature display to °F or °C
10	11	<b>TIME</b> (FWD)	BEEP (ON)	OFF	Turns beeper ON or OFF
11	12	<b>TIME</b> (FWD)	REMT SEN (OFF)	ON	Selects remote sensor OFF or ON
12	13	<b>TIME</b> (FWD)	PART LOCK (OFF)	ON	Selects partial keypad lockout OFF or ON
13	14	<b>TIME</b> (FWD)	LOCK (OFF)	ON	Selects total keypad lockout OFF or ON
14	N/A	<b>TIME</b> (FWD)	RH	20 LO to 20 HI	Adjusts humidity display higher or lower
15	N/A	<b>TIME</b> (FWD)	DRY (0)	HI - LO	Selects programmable automatic humidity reduction
16	15	<b>PROGRAM</b> (RUN)			Returns to normal operation

**NOTE:** COMP LOCK OFF permanently defeats compressor lockout. Turn this feature off only if the system already provides for compressor short-cycle protection