

## FOR YOUR SAFETY READ BEFORE LIGHTING



**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance has a pilot which must be lighted by hand. When lighting the pilot, follow these instructions exactly.
- B. BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.


### WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.

- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it; call a qualified service technician. Force or attempted repair may result in a fire or explosion.
  - D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

## LIGHTING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. Remove control access panel.
5. Turn gas control knob clockwise to "OFF."

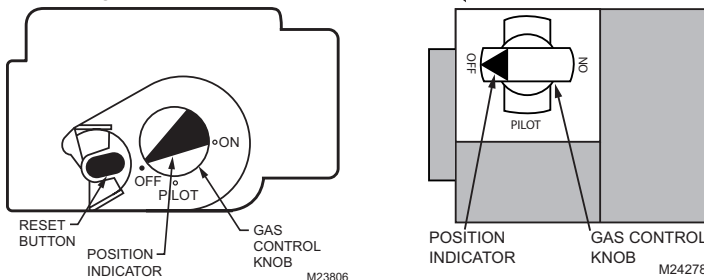

**NOTE:** V400/V800/VS820 gas control knob will need to be pushed in slightly before it will turn. Do not force the knob.

6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
7. Remove the pilot access panel located below and behind the gas control unit.

8. Find pilot—follow metal tube from gas control. The pilot is between the two burner tubes behind the pilot access panel.
9. Turn knob on gas control counterclockwise to "PILOT."



10. Push in red reset button (V400/V800/VS820 control knob pushes in instead) all the way and hold in. Immediately light the pilot with a match. Continue to hold the control knob or red reset button in for about one (1) minute after the pilot is lit. Release knob or red reset button and it will pop back up. Pilot should remain lit. If it goes out, repeat steps 5 through 10.

- If knob or red reset button does not pop up when released, stop and immediately call your service technician or gas supplier.
- If the pilot will not stay lit after several tries, turn the gas control knob to "OFF" and call your service technician or gas supplier.

11. Replace pilot access panel.
12. Turn gas control knob counterclockwise to "ON."
13. Replace control access panel.
14. Turn on all electric power to the appliance.
15. Set thermostat to desired setting.

## TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove control access panel.

4. Turn gas control knob clockwise to "OFF." Do not force.

**NOTE:** V400/V800/VS820 gas control knob will need to be pushed in slightly before it will turn. Do not force the knob.

5. Replace control access panel.

### Automation and Control Solutions

Honeywell International Inc.  
1985 Douglas Drive North  
Golden Valley, MN 55422  
customer.honeywell.com

Honeywell Limited-Honeywell Limitée  
35 Dynamic Drive  
Toronto, Ontario M1V 4Z9



## **MOUNTING INSTRUCTIONS**

1. Choose a location on the furnace cabinet where the lighting instructions will be readily visible when the pilot is being lit.
2. Remove the paper backing.
3. Line up the top edge of the sticker so it looks straight and press down the edge. Roll the sticker down from the top, smoothing it with your hand and removing air bubbles as you go.
4. Rub your hand gently over the entire sticker to make sure it is firmly attached to the furnace cabinet.
5. Discard the paper backing.

